


TRAVEL CONGA STAND

TRAVEL BONGO STAND PC800TB, PC800TBS (Short Style)

Assembly and Setup Instructions

To get optimal performance from your PC800TC/PC800TB/PC800TBS instrument stands, please read these instructions completely before mounting your instruments.

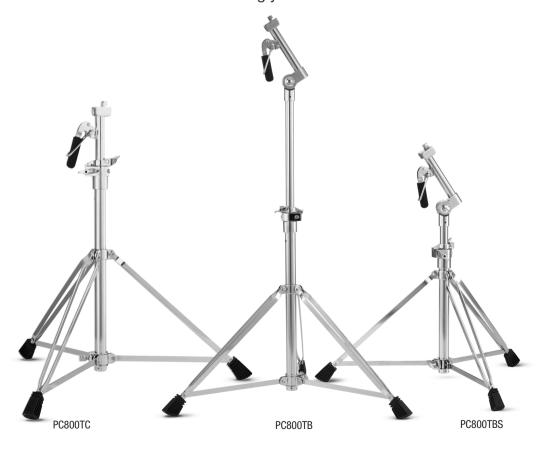



Step 1.
MOUNTING BRACKET INSTALLATION - CONGA ONLY

To install the mounting bracket on the conga place the Travel Conga head-down ona secure flat surface. Using a Phillips Head screwdriver remove each of the threescrews from the bottom of the Travel Conga by turning them counter-clockwise.

Then set them to the side (Fig.1).



Step 2.
MOUNTING BRACKET INSTALLATION - CONGA ONLY

Place the mounting bracket on the bottom of the Travel Conga and align the "Hook" vertically to the" lug" that is opposite of the logo badge, as shown (Fig.2).



Step 3.
MOUNTING BRACKET INSTALLATION - CONGA ONLY

Attach the mounting bracket to the bottom of the Travel Conga with the three screws provided. Using a Phillips Head screwdriver, turn each screw clockwise until tight (Fig.3).



Step 4.
DRUM TO STAND ATTACHMENT - CONGA & BONGOS

To attach the Travel Conga/Bongos to the stand, first set the height to your desired setting. Then locate the slot on the stand top, and set the hasp and handle to the off position (Fig.4).



Step 5.
DRUM TO STAND ATTACHMENT - CONGA & BONGOS

To mount the Travel Conga and Travel Bongos onto the stand, align the mounting bracket hook with the stand hasp.

Then place the square mounting bracket receiver onto the square post of the stand. Ensure the Travel Conga and Travel Bongos are in the forward position on the post as shown (Fig.5).



For the Travel Bongo only:

Next, move the hasp upward so it is positioned between the two drums, but do not place it onto the hook (FIG.5A).



Next, slide the Travel Conga and Travel Bongos back so the mounting bracket is inserted into the slot of the square post, as shown (Fig.5B).



Then place the hasp on the hook (Fig.5C).

CAUTION

The Travel Conga and Travel Bongos must be fully inserted into the slot for the hasp and hook to secure the them to the stand. Failure to do so may result in damage to the drums.



Step 6. DRUM TO STAND ATTACHMENT - CONGA & BONGOS

Place the hasp over the hook as shown (Fig.6).

Then squeeze the handle using the stand post as leverage (Fig.6A) until fully locked (Fig.6B).

Check the drum, it should now be firmly attached to the stand. If all the previous steps have been followed correctly and the drum is not firmly attached to the stand, the hasp may need adjustment









Step 7.
HASP ADJUSTMENT - CONGA & BONGOS

Start with the Travel Conga/Bongos off the stand. Next, flip the hasp so it rests on the handle, then loosen the 8mm upper-locknut by turning it counter-clockwise as shown (Fig.7).

If the hasp is too loose, tighten the lower-locknut (Fig.7A).

Conversely, if the hasp is too tight then loosen the lower-locknut. Check adjustment by attaching the Travel Bongos to the stand. Repeat to fine-tune the adjustment. Once firm, tighten the upper-locknut to secure the setting as shown (Fig.7B).



